

INTEGRATE

DRIVING

GENERATOR

PROTECTIVE

BREATHING

EQUIPMENT

CARGO

DOOR

PROTECTIVE


BREATHING EQUIPMENT *

EMERGENCY MEDICAL KIT/

FIRST AID KIT *


ENGINE FIRE EXTINGUISHER


APU GENERATOR

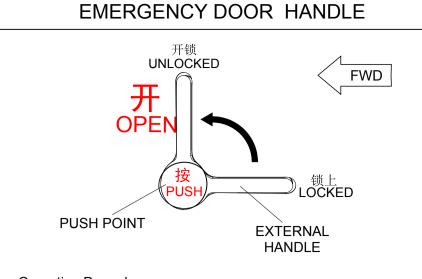

Operating Procedures
CAUTION: THE SLIDES OF THE EMERGENCY EXIT DOORS
MUST BE ALWAYS IN ARMED STATUS.

- 1. Push the door handle to lift it.
- 2. Rotate the handle to the UNLOCKED position along the arrow.3. Pull the door backwards to the position of gust lock.

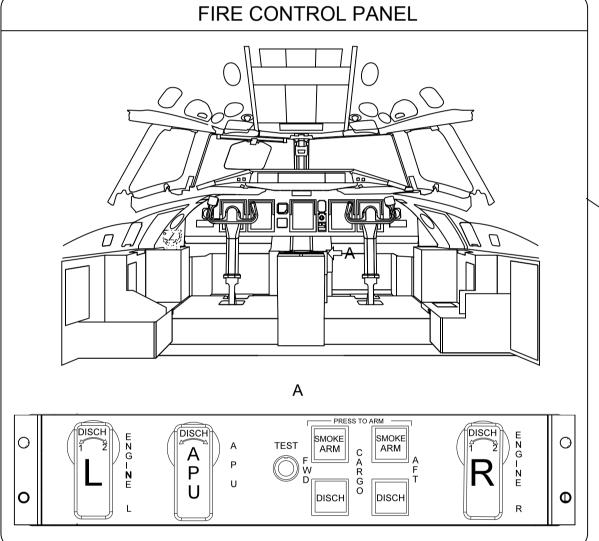

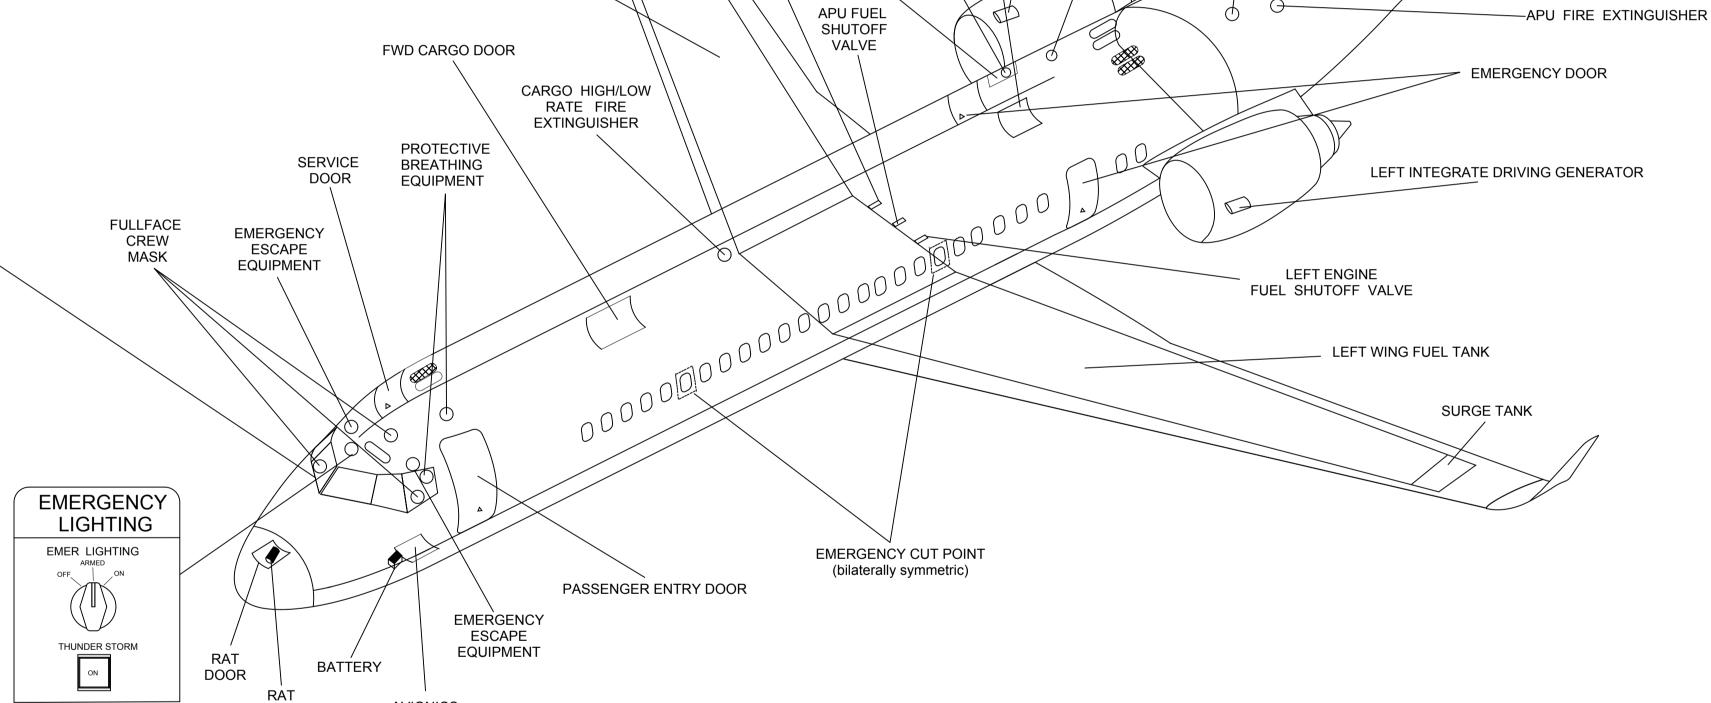

SURGE TANK

RIGHT WING FUEL TANK


AVIONICS


COMPARTMENT ACCESS PANEL


GENERATOR

RIGHT ENGINE

FUEL SHUTOFF VALVE

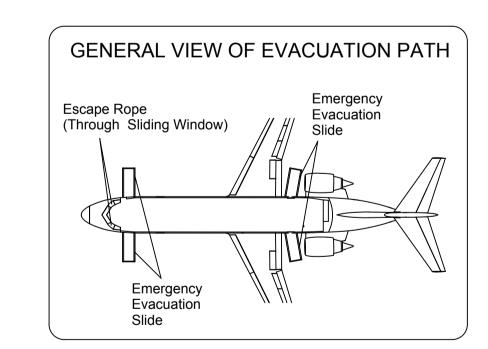

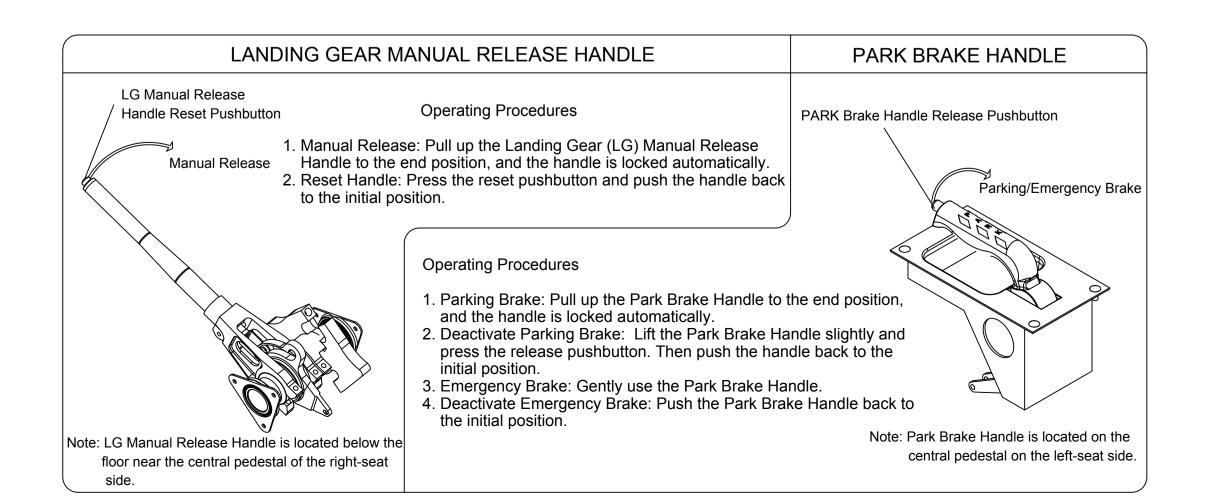

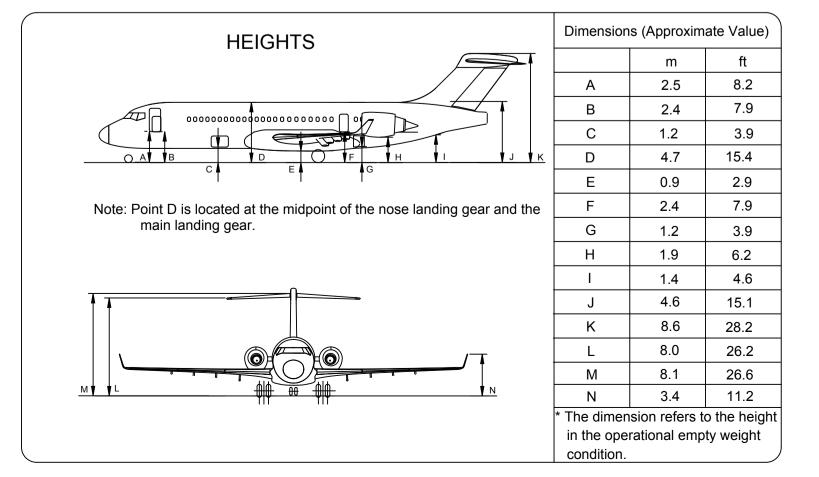

A WHEEL FIRE, AS WHEELS AND TIRES MAY EXPLODE.	•	gen Cylinder nder (Evacuation Slid towage Bin
NOTE This chart shows the layout of standard configura The number or mounted location of some items r be different depending on aircraft configuration. The equipment illustrated in black is installed beli the floor.	Effectivity: S	2024.12.20 tandard configuration

C909(ARJ21-700) Crash Crew Chart

